

KEY TO MATERIALS :-

1	Visqueen Pre Applied Membrane.
2	Visqueen Ultimate Double Sided Tape.
3	Visqueen Ultimate Lap Tape.
4	Smooth slab or blinding layer.

NB : Ensure careful placement of steel reinforcement to avoid damage to the DPM.

© Copyright reserved. This drawing may not be reproduced or amended without prior written permission.

Detail issued for Guidance Only. Designer's Approval Required.

Site construction sequencing should be assessed before the appropriate Visqueen Standard Detail is selected & approved by the Designer.


In order to develop a robust design for protecting a structure against groundwater, a Risk Assessment must be carried out in line with the guidance given in BS8102:2009.

The Designer may need to specify one or a combination of waterproofing measures.


All Visqueen materials must be installed in strict accordance with the manufacturer's instructions. Refer to the current Visqueen datasheets.

Do Not Scale - Use Figured Dimensions Only.

TAPED JOINT :
LOW RISK of hydrostatic water pressure

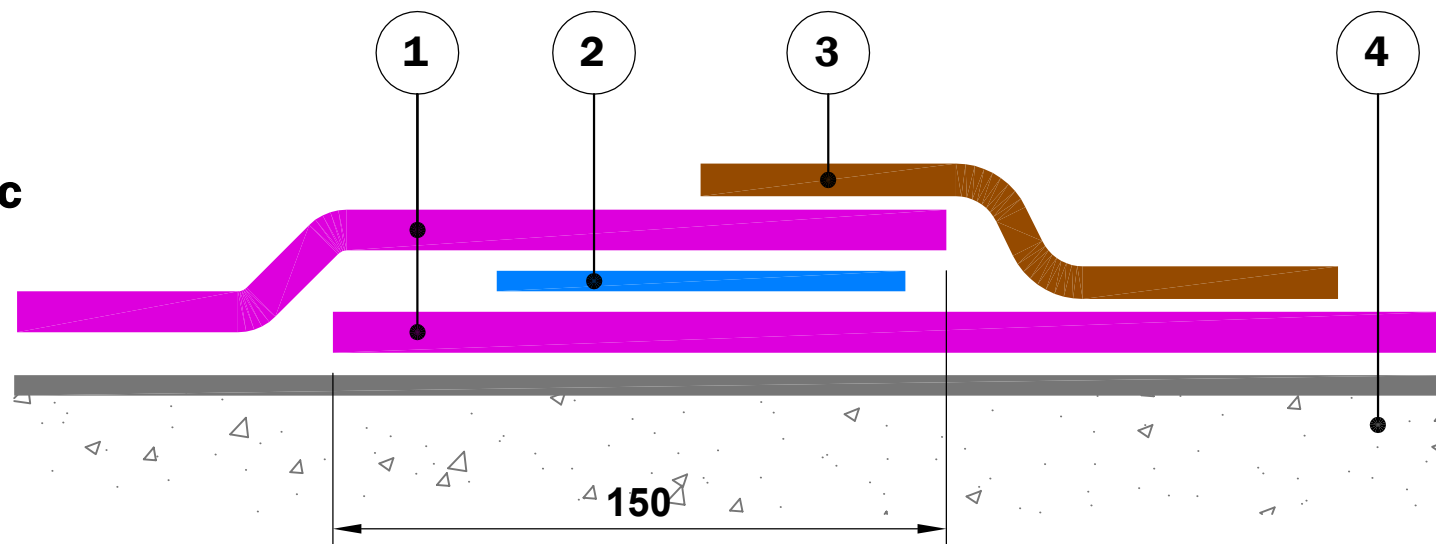

FULLY WELDED JOINT :
HIGH RISK of hydrostatic water pressure

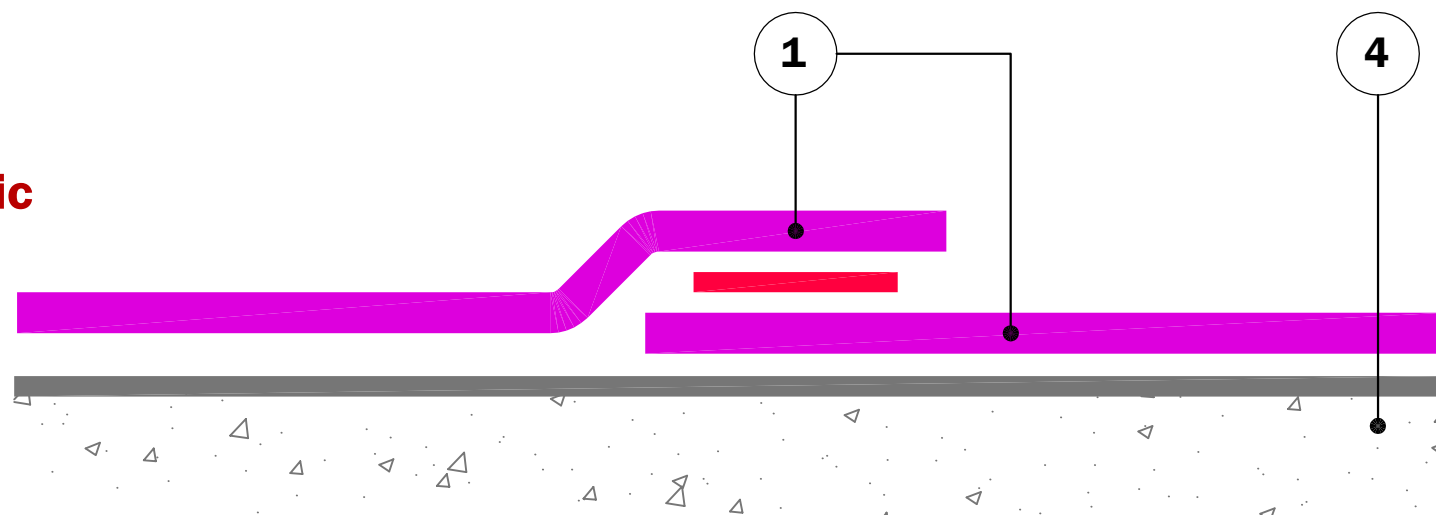

Standard Detail



www.visqueen.com

Scale : NTS

Date : Oct.2019

Drawing No : PAM-JD-01



Typical Pre Applied Membrane Jointing Details.

VISQUEEN
0333 202 6800
www.visqueen.com
enquiries@visqueen.com