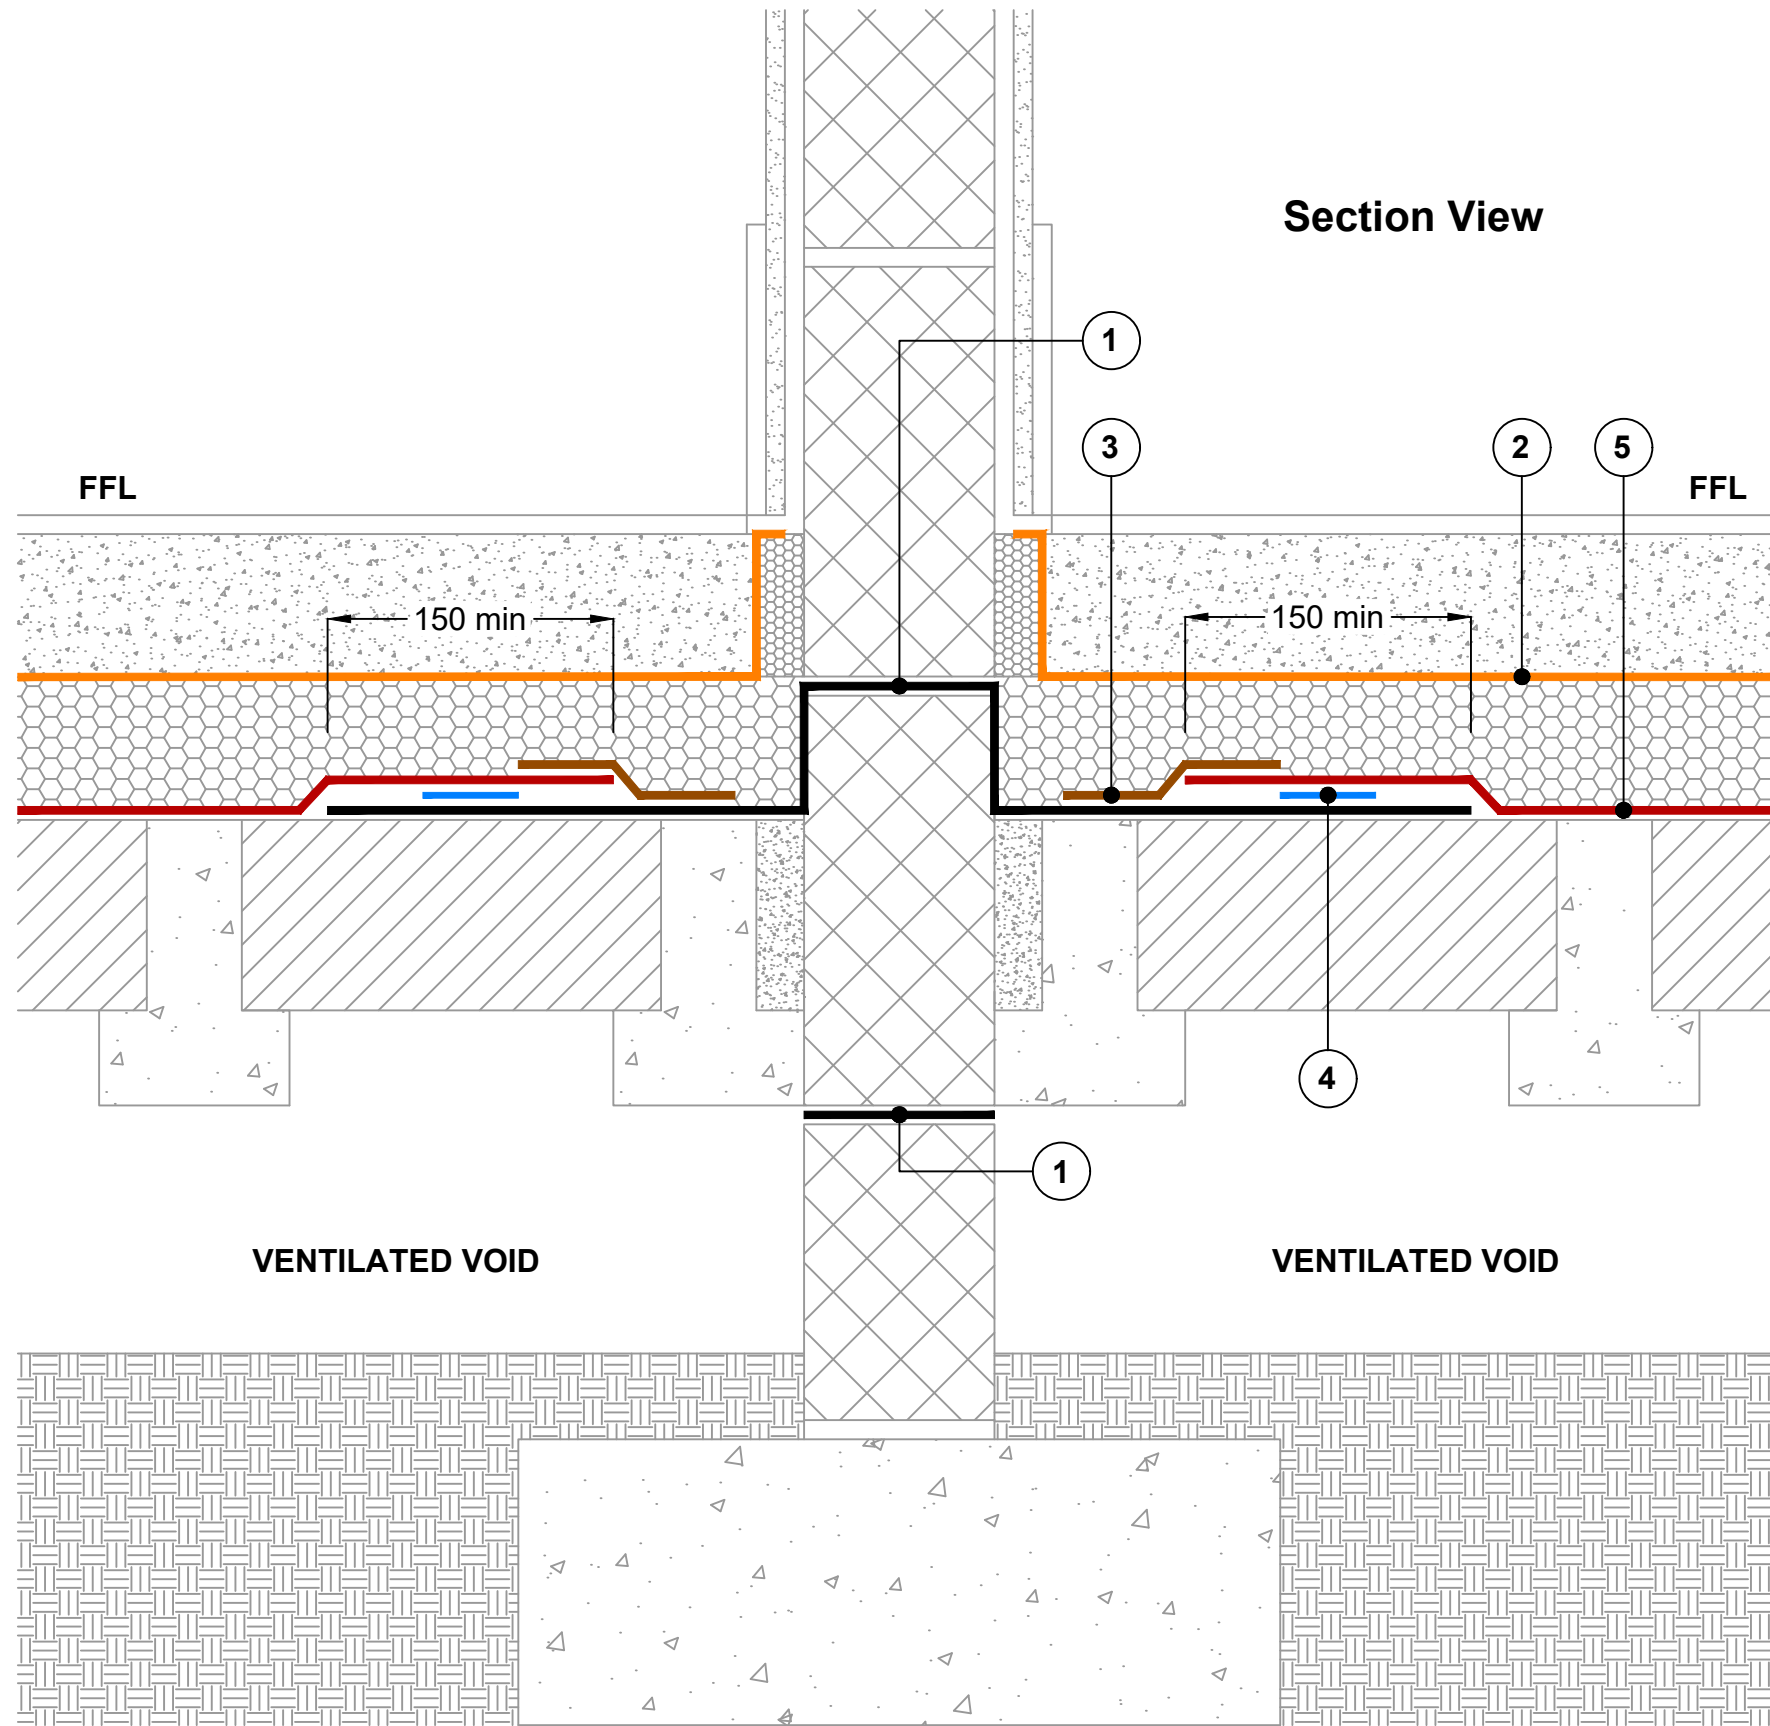## Key to materials:

1	**Visqueen Zedex CPT High Performance Damp Proof Course**
2	**Visqueen Vapour Check or Visqueen Vapour Barrier**
3	**VisqueenPro Single Sided Tape**
4	**VisqueenPro Double Sided Jointing Tape**
5	**Visqueen Radon R400 Membrane**

Section View

FFL

FFL

150 min

150 min

VENTILATED VOID

VENTILATED VOID

Guidance Detail

Date: January 2024	
Drawing No: R400-13	
Revision: A	**Drawn by: JR**
Approved by: SD	

VISQUEEN **RADON R400 MEMBRANE**

MEMBRANE ABOVE SLAB, BEAM & BLOCK FLOOR AT INTERNAL MASONRY WALL

Tel: 0333 202 6800
enquiries@visqueen.com
www.visqueen.com