

© Copyright reserved. This drawing may not be reproduced or amended without prior written permission.

Detail issued for Guidance Only. Designer's Approval Required.


Site construction sequencing should be assessed before the appropriate Visqueen Standard Detail is selected & approved by the Designer.

In order to develop a robust design for protecting a structure against groundwater, a Risk Assessment must be carried out in line with the guidance given in BS8102:2009.

The Designer may need to specify one or a combination of waterproofing measures.


All Visqueen materials must be installed in strict accordance with the manufacturer's instructions. Refer to the current Visqueen datasheets.

Do Not Scale - Use Figured Dimensions Only.

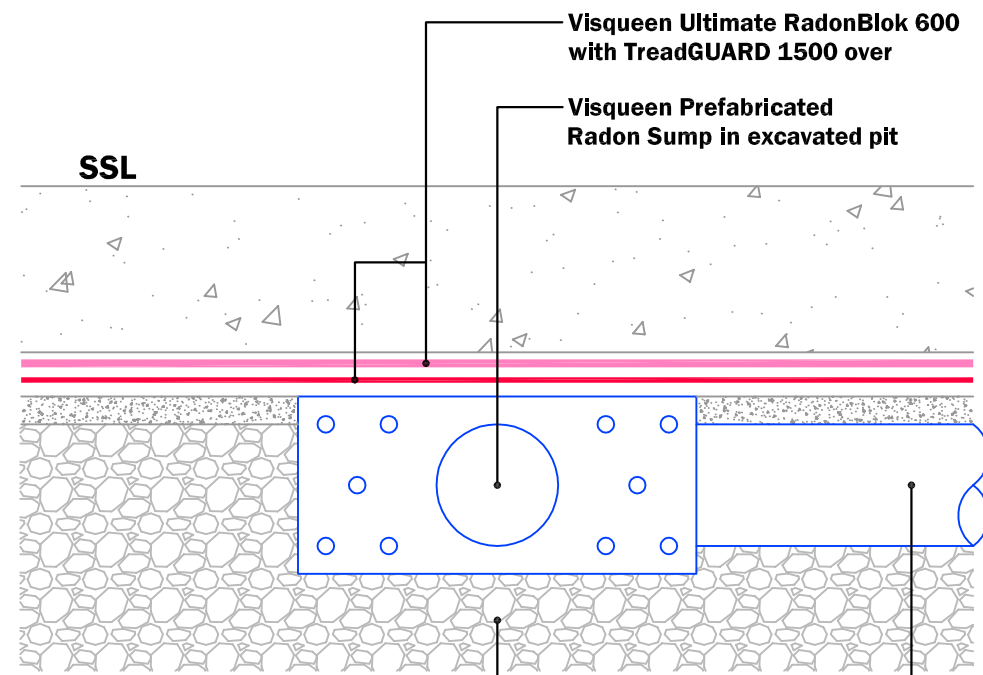

**TYPICAL SECTION Through Radon Sump**

110mm Ø pipes connected to sump outlets ensuring all joints & couplings are tight

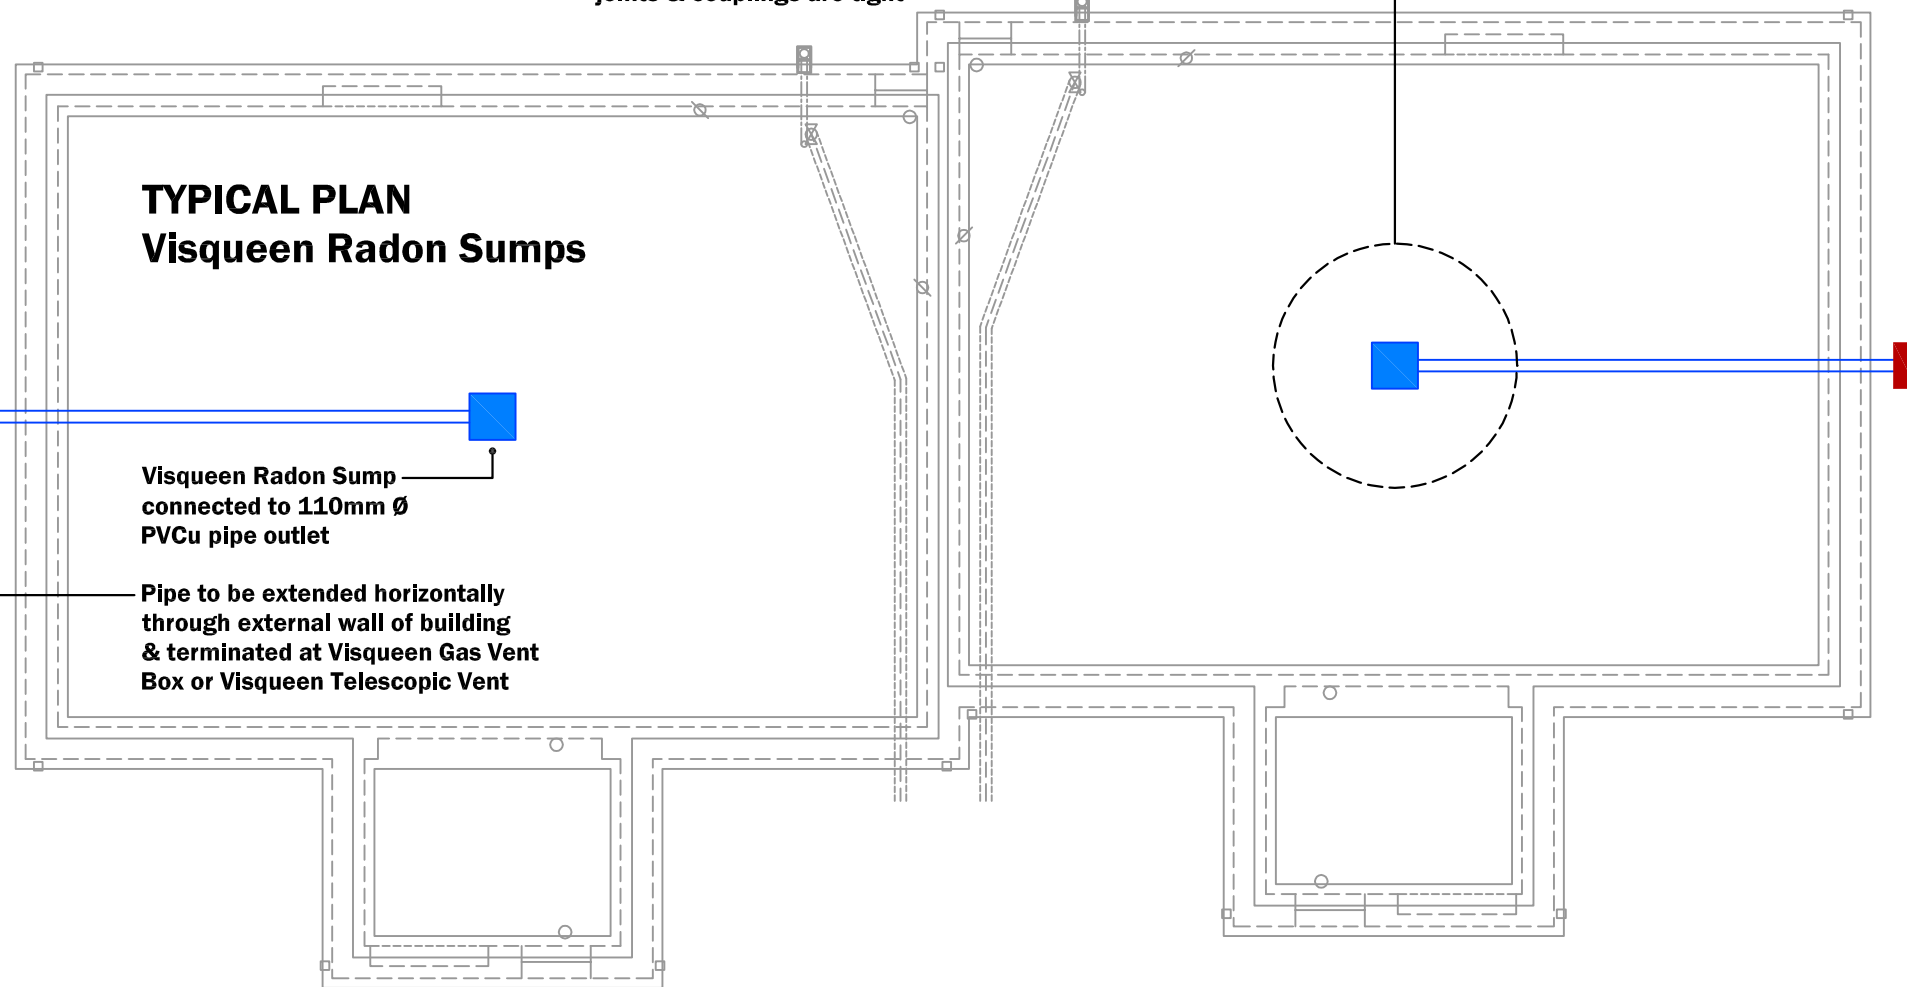

**TYPICAL PLAN Visqueen Radon Sumps**

Visqueen Radon Sump connected to 110mm Ø PVCu pipe outlet

Pipe to be extended horizontally through external wall of building & terminated at Visqueen Gas Vent Box or Visqueen Telescopic Vent

## Standard Detail



[www.visqueen.com](http://www.visqueen.com)

Scale : NTS

Date : Dec.2018

Drawing No : RADBLOK-56

**VISQUEEN**

**ULTIMATE  
RADONBLOK<sup>600</sup>**

## Visqueen Radon Sump - Typical Plan & Section.

**VISQUEEN**  
0333 202 6800  
[www.visqueen.com](http://www.visqueen.com)  
[enquiries@visqueen.com](mailto:enquiries@visqueen.com)