KEY TO MATERIALS :-

1	Visqueen HP DPM.
2	Visqueen Zedex High Bond DPC on Visqueen HP Tanking Primer.
3	Visqueen Ultimate Double Sided Tape.
4	Visqueen Ultimate Lap Tape.
5	Visqueen Vapour Barrier.
6	Visqueen Zedex CPT DPC.
7	Rigid insulation by others.

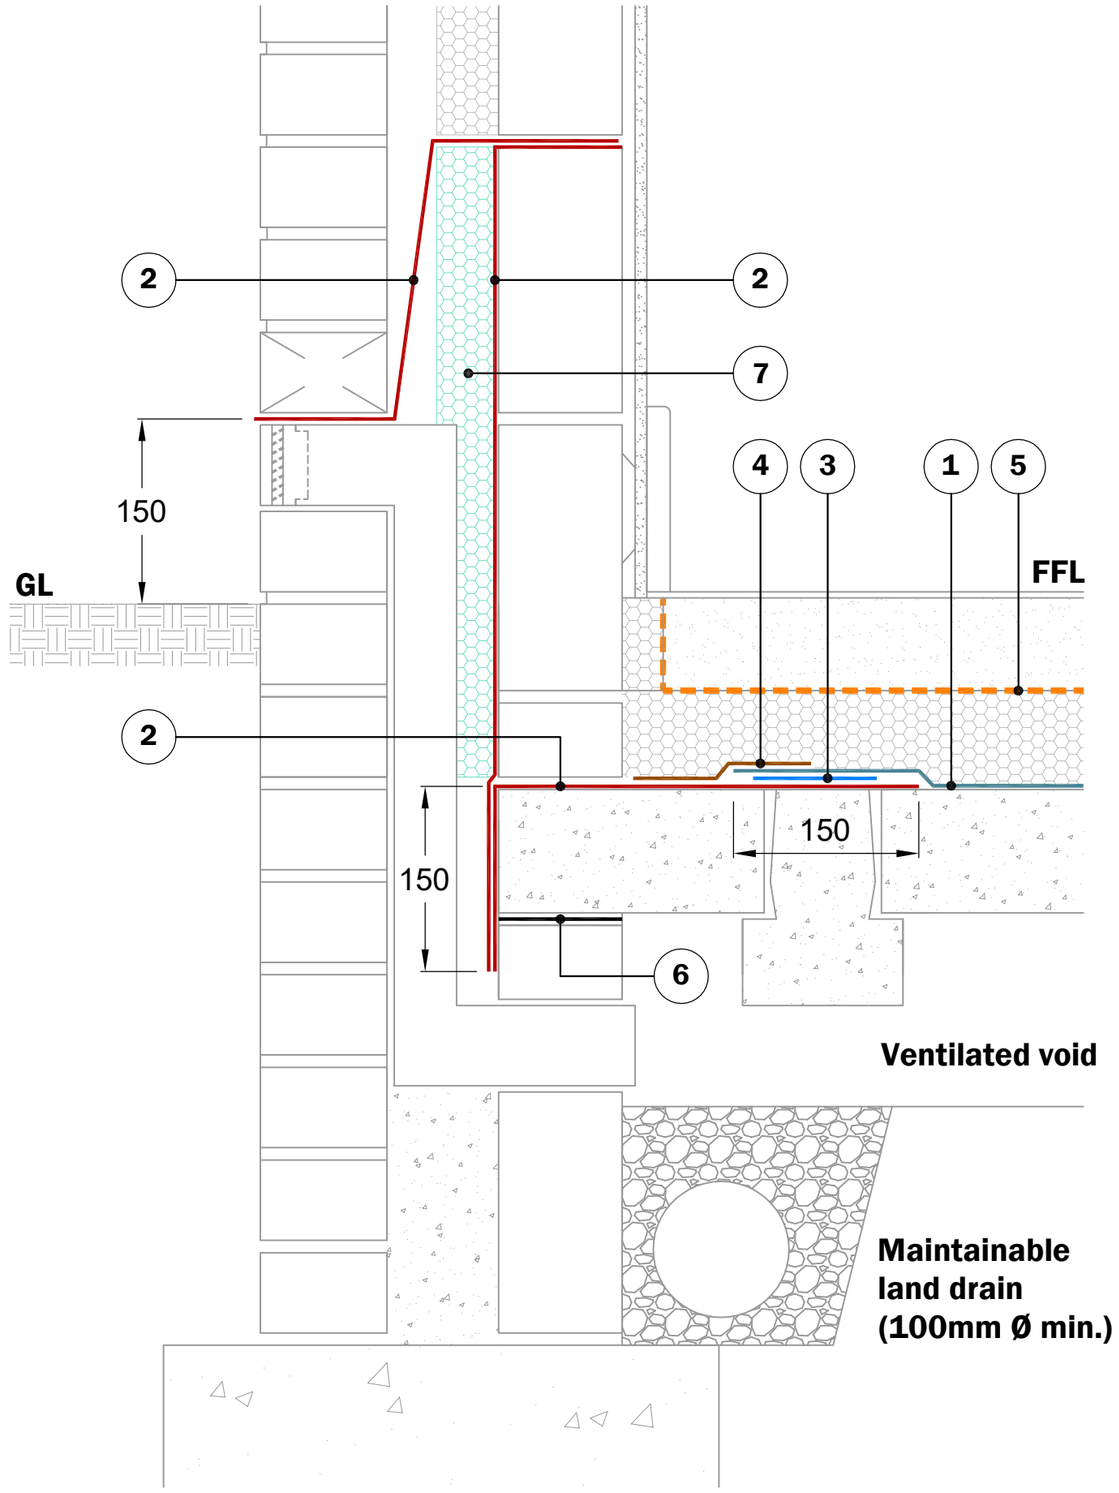

© Copyright reserved. This drawing may not be reproduced or amended without prior written permission.

Detail issued for Guidance Only. Designer's Approval Required.

Site construction sequencing should be assessed before the appropriate Visqueen Standard Detail is selected & approved by the Designer.

In order to develop a robust design for protecting a structure against groundwater, a Risk Assessment must be carried out in line with the guidance given in BS8102:2009.

The Designer may need to specify one or a combination of waterproofing measures.

All Visqueen materials must be installed in strict accordance with the manufacturer's instructions. Refer to the current Visqueen datasheets.

Do Not Scale - Use Figured Dimensions Only.

Standard Detail

www.visqueen.com

Scale : NTS

Date : Jan.2019

Drawing No : T-21

VISQUEEN STRUCTURAL WATERPROOFING

Typical Suspended Slab Detail with Tanked Blockwork.

VISQUEEN
0333 202 6800
www.visqueen.com
enquiries@visqueen.com